




**Bulletin 4480-T26-US**

April, 2014

---

# Superkrimp Technical Manual

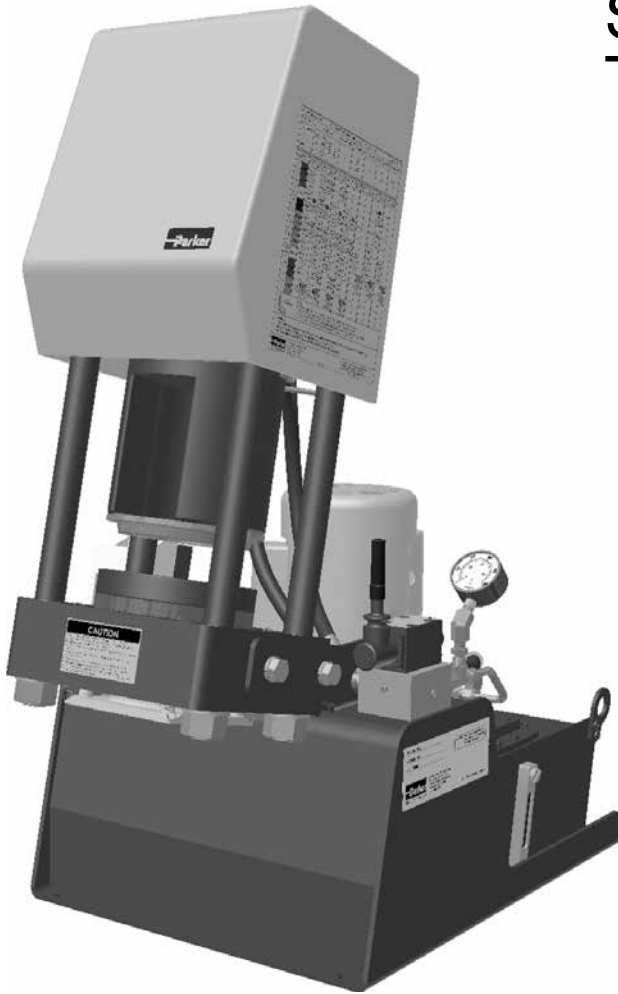

- Read the entire Technical Manual prior to mounting and operating this crimper.
- View the enclosed CD prior to operating this crimper

**WARNING** — When using this machine, always exercise basic safety precautions, including the following:

1. Use this machine only for its intended purpose: to fabricate Parker hose assemblies.
2. Parker Hannifin will not accept responsibility for any incidental, consequential or special damages of any kind or nature whatsoever that result from any subsequent alterations to any Parkrimp machine. Parker Hannifin disclaims any warranties on items altered after leaving the Parker Hannifin facility.
3. This machine must be properly installed and located in accordance with the installation instructions before it is used.

To minimize the possibility of injury:

1. The power unit must be connected to a grounded properly rated, protected and sized power-supply circuit to prevent electrical shock and to avoid electrical overload;
2. DO NOT OPERATE OVER MAXIMUM RATED WORKING PRESSURE; AND
3. CHECK FOR SAFE SYSTEM SETUPS.

Make sure that the valve, connecting hoses, etc. are protected from any external source of damage, such as: excessive heat, flame, moving machine parts, sharp edges, falling objects, corrosive chemicals, etc.



**Parker Safety Guide for Selecting and Using Hose, Tubing, Fittings and Related Accessories**

Parker Publication No. 4400-B.1  
 Revised: May, 2002

**WARNING:** Failure or improper selection or improper use of hose, tubing, fittings, assemblies or related accessories ("Products") can cause death, personal injury and property damage. Possible consequences of failure or improper selection or improper use of these Products include but are not limited to:

- Fittings thrown off at high speed.
- High velocity fluid discharge.
- Explosion or burning of the conveyed fluid.
- Electrocution from high voltage electric powerlines.
- Contact with suddenly moving or falling objects that are controlled by the conveyed fluid.
- Injections by high-pressure fluid discharge.
- Dangerously whipping Hose.
- Contact with conveyed fluids that may be hot, cold, toxic or otherwise injurious.
- Sparking or explosion caused by static electricity buildup or other sources of electricity.
- Sparking or explosion while spraying paint or flammable liquids.
- Injuries resulting from inhalation, ingestion or exposure to fluids.

Before selecting or using any of these Products, it is important that you read and follow the instructions below. Only Hose from Parker's Stratoflex Products Division is approved for in flight aerospace applications, and no other Hose can be used for such in flight applications.

**Offer of Sale**

The items described in this document are hereby offered for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. This offer and its acceptance are governed by the provisions stated in the "Offer of Sale".

**Table of Contents**

Specifications..... 4

Installation & Operating Instructions ..... 5

Electrical Requirements ..... 6

Die Part Numbers ..... 7

Tooling ..... 8

Tool Selection Chart..... 9

Crimping Instructions ..... 10-11

Assembly Details and Parts Lists ..... 12-16

Maintenance ..... 17

Trouble Shooting Guide..... 18-19

Safety Guide (Parker Publication 4400-B.1)..... 20-22

Offer of Sale..... 23

**Help us help you ...**

**Read this guide carefully.**

**It is designed to help you operate and maintain your Superkrimp. If you don't understand something or need more help, call:**

Technical Service Department  
Parker Hannifin Corporation  
Hose Products Division  
Phone: (440) 943-5700  
Fax: (440) 943-3129

Write down the Model and Serial Numbers:

88C- \_\_\_\_\_  
Model Number

\_\_\_\_\_  
Serial Number (See page 12, item 25 for location)

Use these numbers in any correspondence or service calls.

**RECEIVING INSTRUCTIONS: UNPACKING** – Remove all documents and components from shipping containers.

**INSPECTION** – Visually inspect all components for shipping damage. If any shipping damage is found, notify the carrier at once. Shipping damage is not covered by the Parker warranty. The carrier is responsible for all repair and replacement costs resulting from such damage.



**Specifications**

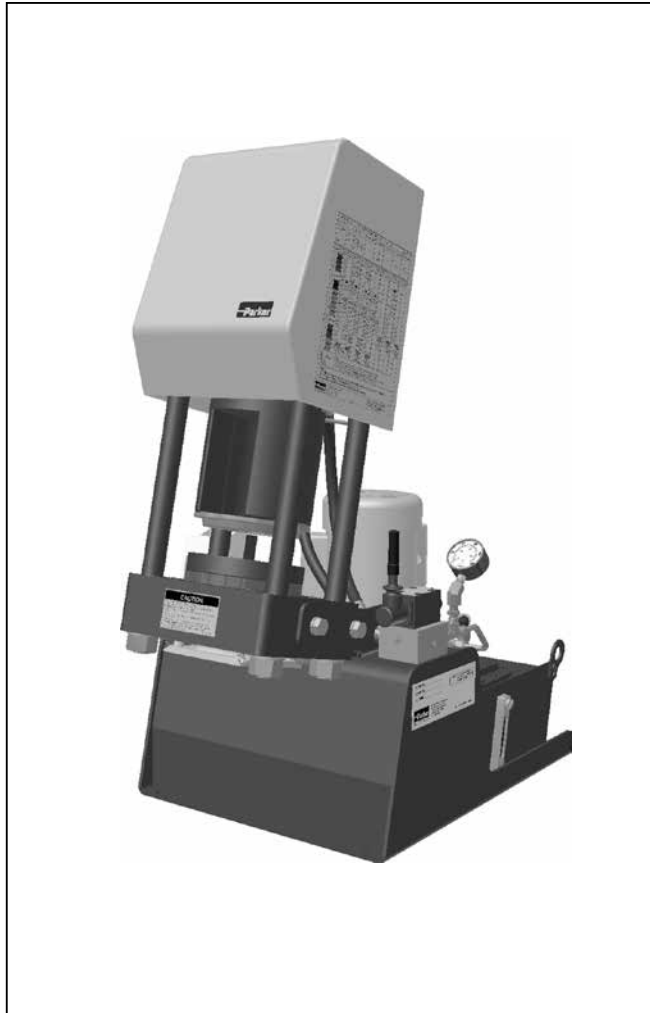


Figure 1: Superkrimp Crimping Machine

**Specifications**

**Dimensions:** 20" wide, 31" deep, 41" high  
**Weight:** 600 lbs.

**Capabilities:** 25, 26, 43, 70, 71, 73, 76, 77, 78, 79, 81 and HY steel and stainless steel series fittings.

**Note:** For the most current crimper capability, reference *CrimpSource* online at [www.parkerhose.com](http://www.parkerhose.com) or contact your Parker Products supplier.

**Set up time** 30 seconds

**Full cycle time** 20 seconds without adapter bowl  
 15 seconds with adapter bowl

**Note:** Cycle times vary depending on hose and fitting styles and sizes.

**Operating Pressure:** 5,000 psi

**Electrical Requirements:**

Model 88C-081 Factory Standard:  
 230 volt, 3 phase, 60 hertz, 4.8 FLA.

Model 88C-082 Factory Standard:  
 230 volt, 1 phase, 60 hertz, 7.8 FLA.

**Alternate Voltage:**

Both models have dual voltage, 50/60 hertz motors. Both models can be rewired to operate at alternate voltages by a qualified electrician.

**Note:** Changing the operating voltage may also require replacing the motor starter.

**Model Numbers**

**Model 88C-081 includes:**

- Superkrimp crimper with 230 volt, 3 phase power unit
- Adapter Bowl 83C-OCB
- Spacer Ring 83C-R02
- Spacer Plate 83C-R02H

**Model 88C-082 includes:**

- Superkrimp crimper with 230 volt, 1 phase power unit
- Adapter Bowl 83C-OCB
- Spacer Ring 83C-R02
- Spacer Plate 83C-R02H

**Model 88C-KDA (Die Kit) Includes:** 43 Series -4, -6, -8, -12, -16, and -20 dies and 70/71 Series -6, -8, -12, -16, 20, and -24 dies.

**Installation & Operating Instructions**

**Installing the Superkrimp Crimper**

1. Obtain a sturdy, level work surface capable of supporting at least 600 lbs. which is 34" - 38" high and located in a well-illuminated area. This work surface must be able to fit the mounting hole pattern shown in Figure 2.
2. Remove crate top from and sides from from shipping pallet. Unbolt the crimper from the pallet and remove all accessories. Check to make sure you have received the following items:

Qty.	Part Number	
1	83C-OCB	Adapter Bowl Assembly
1	83C-R02	Spacer Ring
1	83C-R02H	Spacer Plate
1	83C-R12	Split Die Ring (Front Half)
1	832181	Hoist Ring
1	842205	Grease
1	881612-13 or 881612-14	Receptacle
1	8XC-DVD	Training DVD
1	4480-T26-US	Technical Manual

3. Remove the yellow cylinder guard held by four 1/4" cap screws and set aside. Included with the crimper is a 3/4" threaded eyebolt used for lifting and handling. **Fully** thread the enclosed eyebolt into cylinder top hole. Figure 3 highlights the eyebolt.

**Caution:** Observe normal safety precautions when lifting, lowering, or moving this unit.

4. Remove the crimper from the pallet using the eyebolt and position the unit onto the work surface so that the base plate overhangs the front of the work surface by six inches.
5. Secure the unit to the work surface using the mounting hole pattern shown in Figure 2. Four 9/16" holes are provided in the crimper base for this purpose.
6. Remove the eyebolt and install the cylinder cover with the four 1/4" cap screws.
7. **Remove the reservoir breather shipping plug.**
8. **Attach the enclosed breather cap to the reservoir.**
9. The crimper has been filled with oil and cycled. Check the oil level in the reservoir prior to start-up. The oil level should be visible in the Sight Gage. Add Enterpac oil if filling is required.
8. Wire the machine in accordance with the requirements of the National Electrical Code.

**Caution:** Check for proper motor rotation.

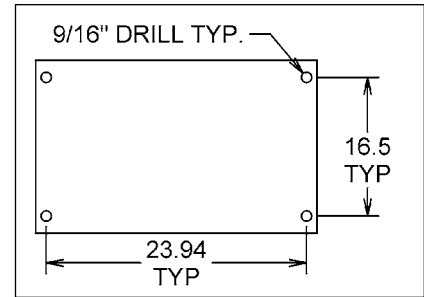


Figure 2: Mounting holes

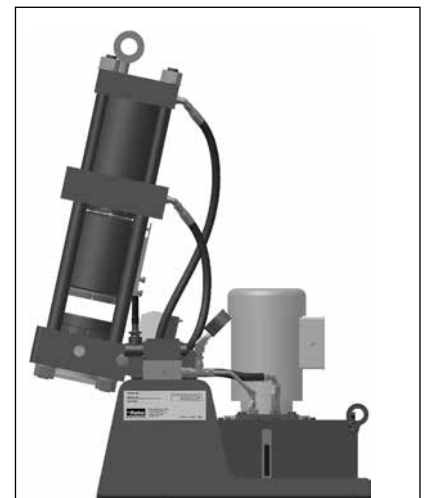


Figure 2: Eye bolt should be used for lifting.

**Installation & Operating Instructions**

**Removal of Air from the Superkrimp Hydraulic Circuit**

The hydraulic system, when connected for the first time, will have air in the system. The air must be removed for safety and proper operation. Air can generally be removed from the system by fully advancing and retracting the hydraulic cylinder several times. When the trapped air is removed from the hydraulic circuit, the cylinder will advance and retract smoothly. Sluggish cylinder action is usually the first sign of air in the system.

**To Test and Operate the SuperKrimp Crimper**

1. Place adapter bowl and spilt die ring(both halves) in machine.
2. Start motor by depressing on button
3. Pull valve handle toward you to lower cylinder. Pressurize system to 2,000 psi and check for any leaks
4. Pull valve handle toward you and fully pressurize system. Gauge pressure should be 5,000 to 5,300 psi. Push valve handle to raise cylinder.

**Electrical Requirements**

**IMPORTANT SAFETY NOTICE**

**THIS INFORMATION IS INTENDED FOR USE BY INDIVIDUALS POSSESSING ADEQUATE BACKGROUNDS OF ELECTRICAL, ELECTRONIC AND MECHANICAL EXPERIENCE. ANY ATTEMPT TO REPAIR THIS MACHINE MAY RESULT IN PERSONAL INJURY AND PROPERTY DAMAGE.**

**THE MANUFACTURER OR SELLER CANNOT BE RESPONSIBLE FOR THE INTERPRETATION OF THIS INFORMATION, NOR CAN IT ASSUME ANY LIABILITY IN CONNECTION WITH ITS USE.**

**DISCONNECT POWER CORD BEFORE SERVICING**  
**IMPORTANT — RECONNECT ALL GROUNDING DEVICES**

Model No:	88C-081	88C-082
Voltage:	208-230/460 V	115/208-230 V
Amperage	4.6-4.8/2.4 FLA	14.0/7.0-6.8 FLA
Phase:	3 PH	1 PH
Cycle:	50/60 HZ	50/60 HZ

The power supply should be brought to a separate branch circuit, single-grounded receptacle. The Superkrimp has been shipped with power cord, plug and a receptacle. The outlet box should be within reach of provided cord. We strongly recommend against the use of an extension cord.






























 











 
 
 
 

 










 
 










Motor rotation - always check motor rotation upon first start-up, or if machine is relocated. Jog the motor once and verify that the motor rotation is the same as arrow decal located on motor.

Both models are suitable to operate at 50 hertz voltages as listed on the motor nameplates. Operating at 50 hertz will reduce the motor RPM. The resulting pump output oil flow and cylinder speed will be reduced by approximately 15-18%. The output pressure will be the same.





**Die Part Numbers**

The following dies are available from Hose Products Division for use on the Superkrimp machine.

Fitting Series	-4 RED	-5 PUR	-6 YEL	-8 BLU	-10 ORG	-12 GRN	-16 BLK	-20 WHT	-24 RED	-32 GRN
Die Part Number	80C-A04	80C-A05	80C-A06	80C-A08	80C-A10	80C-A12	80C-A16	80C-A20	83C-A24	83C-A32
43 Series										
Die Part Number			83C-D06	83C-D08	83C-D10					
70 Series										
Die Part Number			83C-D06	83C-D08	83C-D10	83C-D12	83C-D16	83C-D20	83C-D24	
71 Series										
Die Part Number						83C-L12	83C-L16			
73 Series										
Die Part Number						83C-U12	83C-U16			
76 Series										
Die Part Number				80C-CS08	80C-CS10	80C-CS12	83C-CS16			
77 Series										
Die Part Number						83C-L12	83C-L16	83C-L20		
78 Series										
Die Part Number						83C-L12	83C-L16			
79 Series										
Die Part Number			80C-Y06	80C-Y08						
25 Series										
Die Part Number	80C-E04	80C-E05	80C-E06	80C-E08	80C-E10	80C-E12	80C-E16	83C-E20	83C-E24	83C-E32
26 Series										
Die Part Number						80C-V12	80C-V16	80C-V20	83C-V24	83C-V32
81 Series										
Die Part Number	80C-H585			80C-H735	80C-H840	80C-H970	80C-H1120	80C-H1365		
HY Series AX Hose										
Die Part Number	80C-H605			80C-H775	80C-H885	80C-H1010	80C-H1170	80C-H1465	80C-H1880	
HY Series BXX Hose										
Die Part Number	80C-H595			80C-H735	80C-H860	80C-H1015	80C-H1170	80C-H1365		
HY Series 611HT, 801, 836 Hose										

**Tooling**

The following tooling is used for crimping

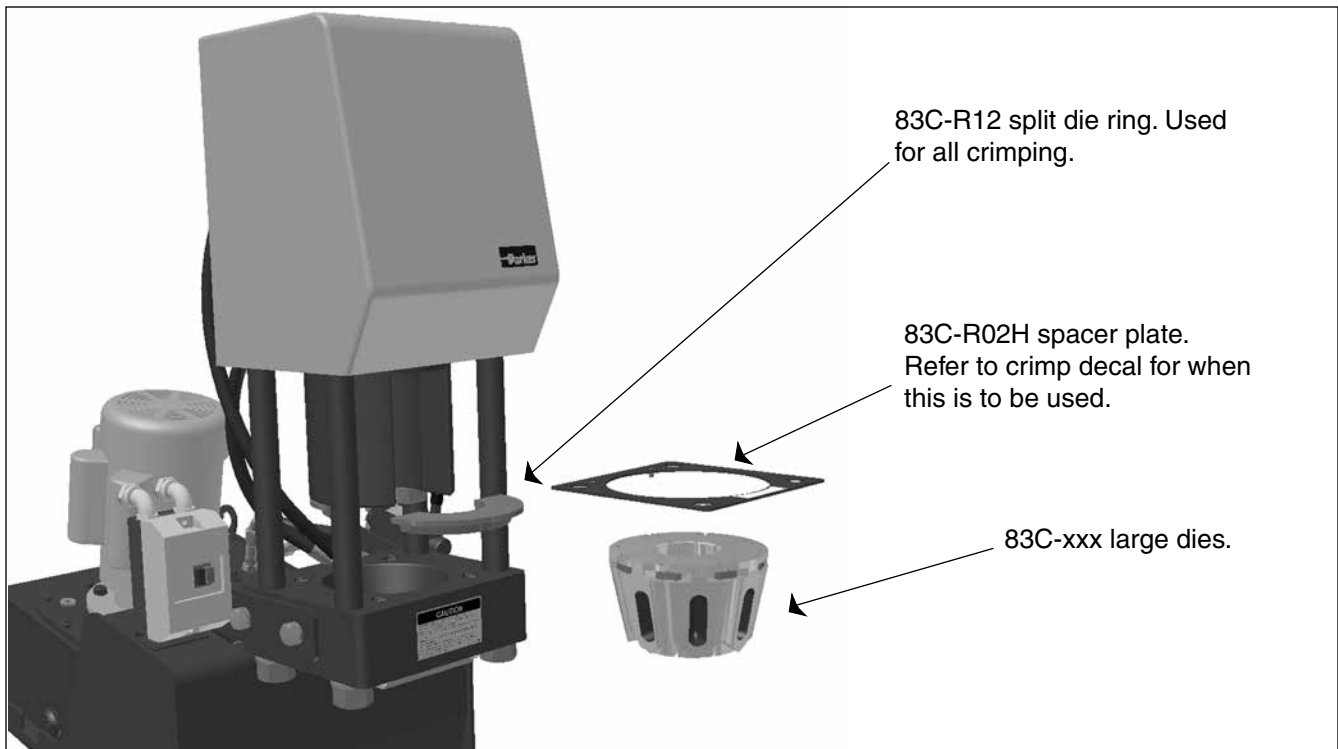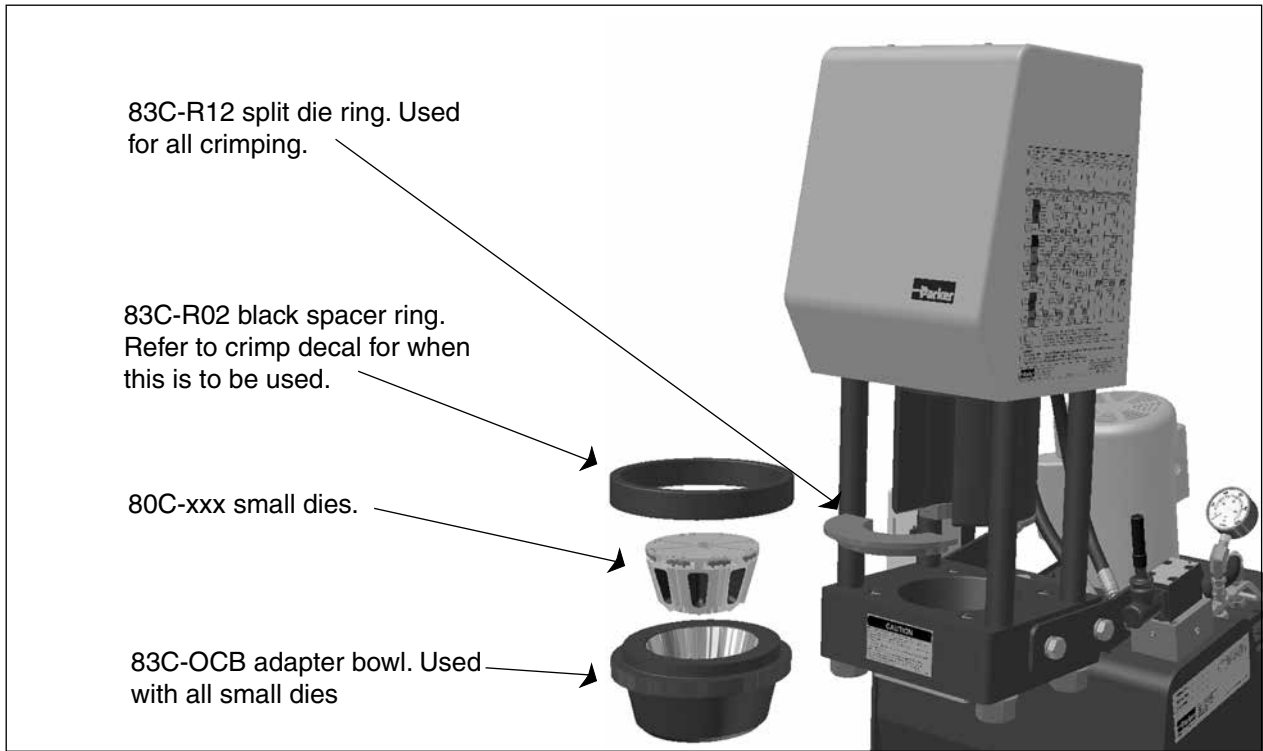



Tool Selection Chart

Parker Hannifin Corporation Hose Products Division 30240 Lakeland Blvd. Wickliffe, Ohio 44092		Superkrimp Hose Die Selection Chart										
Filing Series	HOSE	-4 RED	-5 PUR	-6 YEL	-8 BLU	-10 ORG	-12 GRN	-16 BLK	-20 WHT	-24 RED	-32 GRN	
43 Series	Die Part Number	80C-A04	80C-A05	80C-A06	80C-A07	80C-A10	80C-A12	80C-A16	80C-A20	80C-A24	80C-A32	
	3511C 431 4721S1 3615T 436 4721C 422 4511C 4721L 424 4515T 4821C 426 4711C 4821S	0.645	0.710	0.825	0.945	1.060	1.245	1.590	1.970	2.290	2.735	
	Tooling Required											
70 Series	Die Part Number	80C-D06	80C-D08	80C-D10	80C-D12	80C-D16	80C-D20	80C-D24	80C-D32			
	701 F42 (-8 Only)	0.990 1.010	1.140 1.160	1.260 1.280								
	Tooling Required											
71 Series	Die Part Number	80C-E06	80C-E08	80C-E10	80C-E12	80C-E16	80C-E20	80C-E24	80C-E32			
	711 721S1 7721C 721 7721L 7721S 721C 774 7721S1 (LT-24 and -32 Only)	0.950 0.970	1.100 1.120	1.220 1.240	1.355 1.375	1.655 1.715	2.025 2.045	2.290 2.310				
	Tooling Required											
73 Series	Die Part Number	80C-F06	80C-F08	80C-F10	80C-F12	80C-F16	80C-F20	80C-F24	80C-F32			
	731					1.420 1.440	1.730 1.750					
	Tooling Required											
76 Series	Die Part Number	80C-G06	80C-G08	80C-G10	80C-G12	80C-G16	80C-G20	80C-G24	80C-G32			
	761					1.540 1.560	1.865 1.885					
	Tooling Required											
77 Series	Die Part Number	80C-H06	80C-H08	80C-H10	80C-H12	80C-H16	80C-H20	80C-H24	80C-H32			
	787C 797C	0.930 0.950	1.057 1.077	1.245 1.265	1.541 1.561							
	Tooling Required											
78 Series	Die Part Number	80C-I06	80C-I08	80C-I10	80C-I12	80C-I16	80C-I20	80C-I24	80C-I32			
	781 782TC 782ST					1.420 1.440	1.730 1.750	2.140 2.160	2.100			
	Tooling Required											
79 Series	Die Part Number	80C-J06	80C-J08	80C-J10	80C-J12	80C-J16	80C-J20	80C-J24	80C-J32			
	791TC 792TC 792ST 792LT F42					1.420 1.440	1.730 1.750					
	Tooling Required											
25 Series	Die Part Number	80C-K06	80C-K08	80C-K10	80C-K12	80C-K16	80C-K20	80C-K24	80C-K32			
	271	0.680 0.700	0.825 0.845									
	Tooling Required											
26 Series	Die Part Number	80C-L04	80C-L06	80C-L08	80C-L10	80C-L12	80C-L16	80C-L20	80C-L24	80C-L32		
	213 285 293	0.460 0.480	0.520 0.540	0.575 0.595	0.670 0.690	0.805 0.825	0.915 0.935	1.175 1.195	1.420 1.440	1.670 1.690	2.160 2.180	
	Tooling Required											
81 Series	Die Part Number	80C-M06	80C-M08	80C-M10	80C-M12	80C-M16	80C-M20	80C-M24	80C-M32			
	201 225 SS28UL 206 244 SS23CG 221ER 266	0.500 0.520	0.560 0.580	0.615 0.635	0.710 0.730	0.845 0.865	0.965 0.975	1.215 1.235	1.460 1.480	1.710 1.730	2.200 2.220	
	Tooling Required											
HY Series	Die Part Number	80C-N06	80C-N08	80C-N10	80C-N12	80C-N16	80C-N20	80C-N24	80C-N32			
	811 811HT 881					1.155 1.175	1.450 1.470	1.740 1.760	2.010 2.030	2.430 2.450		
	Tooling Required											
HY Series	Die Part Number	80C-H04	80C-H06	80C-H08	80C-H10	80C-H12	80C-H16	80C-H20	80C-H24	80C-H32		
	AX	0.575 0.595	0.725 0.745	0.830 0.850	0.960 0.980	1.110 1.130	1.355 1.375					
	Tooling Required											
HY Series	Die Part Number	80C-H04	80C-H06	80C-H08	80C-H10	80C-H12	80C-H16	80C-H20	80C-H24	80C-H32		
	BX	0.635 0.655	0.805 0.825	0.915 0.935	1.040 1.060	1.200 1.220	1.495 1.515	1.910 1.930				
	Tooling Required											
HY Series	Die Part Number	80C-H04	80C-H06	80C-H08	80C-H10	80C-H12	80C-H16	80C-H20	80C-H24	80C-H32		
	811HT 801 836	0.575 0.595	0.720 0.740	0.860 0.880	0.995 1.015	1.140 1.160	1.350 1.370					
	Tooling Required											

Caution: Read the operations and technical manual before attempting to operate this machine. Do not operate this machine without guard in place. Keep hands clear of dies and 83C-OCB adapter bowl used on sizes 4 thru 20. Note: Stainless steel crimp diameters are 0.010" greater than table listings with the exception of HY series which are 0.005" greater than table listings.

83C-R12 Split Die ring is used for all crimping operations. 83C-RO0/83C-RO0 small dies and 83C-OCB adapter bowl used on sizes 4 thru 20. 83C-R02 Spacer Ring used with adapter bowl when called out above. 83C-xx Large dies used on sizes -16 thru -32. 83C-R02H Spacer Plate used when called out above.

For a new Decal, contact Parker at 1-800-C-PARKER or print your own at www.parker.com/crimpsource. Decal Part Number: 88C-CRIMPDECAL. REV. A

Notes:

For Reference Only

This chart is displayed on the yellow crimper cover of the Superkrimp machine.

For a complete selection of hose and fittings, see Catalog 4400.

**Caution:** To ensure consistent quality, crimp diameters must be checked —

1. After first assembly.
2. At regular intervals during the production, such as first, last and every 50th assembly.


If you find your crimp diameters out of tolerance, inspect each assembly made. **Never allow hose assemblies with an incorrect crimp diameter to be used.** Use the appropriate Parker Machine Trouble Shooting Guide to determine the cause. If you are unable to determine the cause of the problem, call our Hose Products Division Technical Service Department, (440) 943-5700, for assistance.

Additional Hose Die Selection Charts are available upon request from your Parker supplier.




**Crimping Instructions**


**Crimping instructions when the Adapter Bowl IS NOT required.**

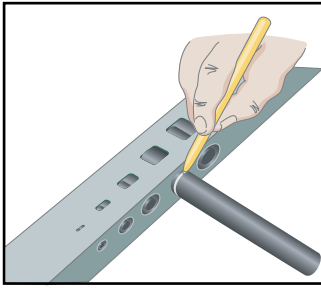


1. Mark the hose insertion depth and push hose into fitting until the mark on the hose is even with the end of the shell. Lubricate hose if necessary, however, **DO NOT lubricate if using spiral hose.** (See Catalog 4400 or CrimpSource online for Hose Insertion Depth table.)

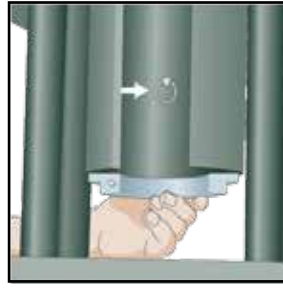


2. With the pusher in the full up position, lift the back half of the split die ring. Lock it in the up position by pushing the slide pin in. (The slide pin is inside the pusher at the back.) Lubricate Die Bowl using a premium quality lithium base grease.

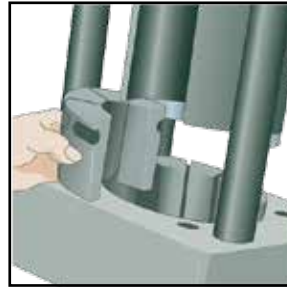


3. Insert the proper size and series die set into the die bowl. (The die sets are in two halves of four dies each. Place one half in the back and one half in the front to facilitate removal of bent tube fittings.) See decal on side of crimper for proper tool selection.

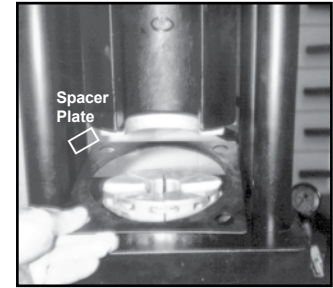


3b. If required, place spacer plate around dies.

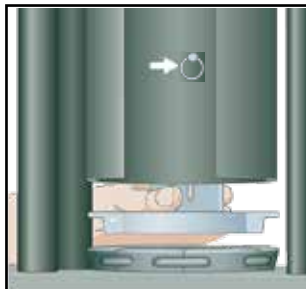


4. Lower the back half of the split die ring onto the dies by pulling the slide pin forward.

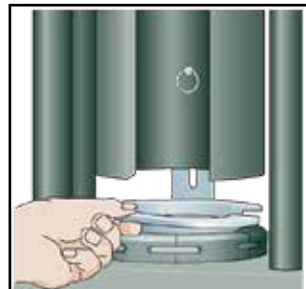

5. Insert the front half of the split die ring aligning the pins in the back half with the hole in the front half.

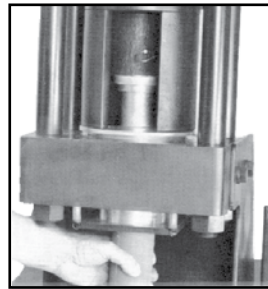

6a. Position hose in dies from below.

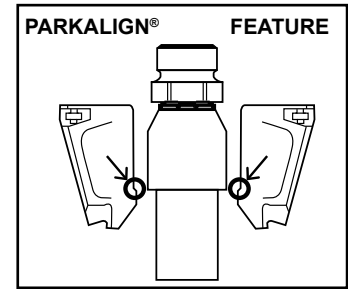

6b. Rest bottom of coupling on die step using PARKALIGN® feature.



7. Turn on the pump by depressing the "ON" switch. Pull the valve handle forward to bring the pusher down for crimping. When the split die ring contacts the base plate, the crimp is complete. Push the valve handle back to lift the pusher, open the dies, and release the finished assembly.

8. You do not have to remove any tooling to remove or insert straight fittings. The front half of the split die ring and the front die train must be removed to insert and remove bent tube fittings.


**Note:** See Hose/Die Selection chart on side of machine, or CrimpSource online, for crimp diameters.

**Note:** Hose assemblies must be inspected for cleanliness and free of all foreign particles.


**Note:** Parker will not accept responsibility for the operation of, provide warranty coverage for, a crimper that is operated by a power unit other than equipment supplied by Parker Hannifin for the express purpose of operating the crimper.

**Crimping Instructions**

**Crimping Instructions when the Adapter Bowl IS required.**

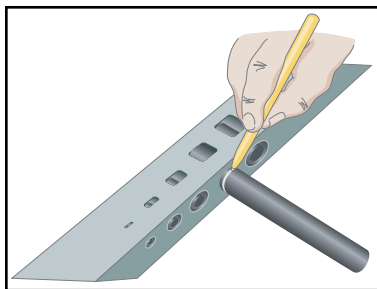


1. Mark the hose insertion depth and push hose into fitting until the mark on the hose is even with the end of the shell. Lubricate hose if necessary, however, **DO NOT lubricate if using spiral hose.** (See Catalog 4400 or CrimpSource online for Hose Insertion Depth table.)

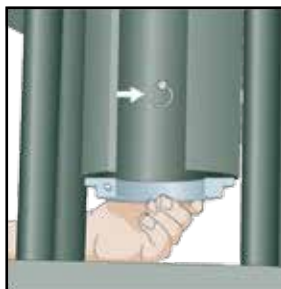

2. With the pusher in the full up position, lift the back half of the split die ring. Lock it in the up position by pushing the slide pin in. (The slide pin is located inside the pusher at the back.)



3. Lubricate Die Bowl using a premium quality lithium base grease. Carefully insert the adapter bowl, 83C-OCB, into the base bowl. The adapter bowl must be tilted toward the back of the crimper during insertion. See decal on side of crimper for proper tool selection.

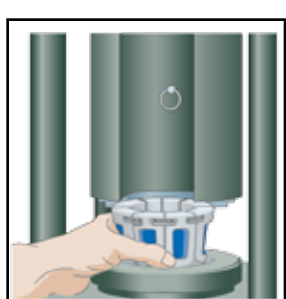


4. Lubricate Die Bowl using a premium quality lithium base grease. Place unitized die-train into the adapter bowl. See decal on crimper for proper die set.  
**Note:** Die sets have color coded cavities indicating size and have the fitting series and dash size stamped on the top.




5. If required, place spacer ring on locating step of adapter bowl. Reference hose/die selection chart for usage.



6. Lower the back half of the split die ring onto the dies by pulling the slide pin forward.

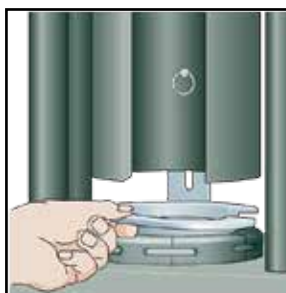

7. Insert the front half of the split die ring aligning the pin in the back half with the hole in the front half.

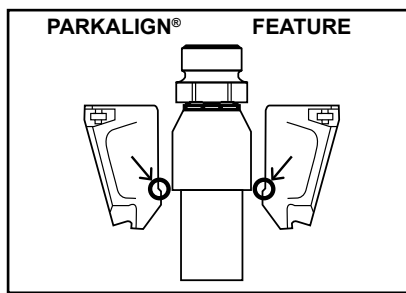


8. Position hose in dies from below. Rest bottom of coupling on die step using PARKALIGN® feature. **Once positioned, go to Step 7 on page 10.**

**Note:** See Hose/Die Selection chart on side of machine, or CrimpSource online for crimp diameters.

**Note:** Hose assemblies must be inspected for cleanliness and free of all foreign particles.

**Note:** Parker Hannifin will not accept responsibility for the operation of, or provide warranty coverage for, a crimper that is operated by a power unit other than equipment supplied by Parker Hannifin for the express purpose of operating the crimper.


Assembly Detail & Parts List

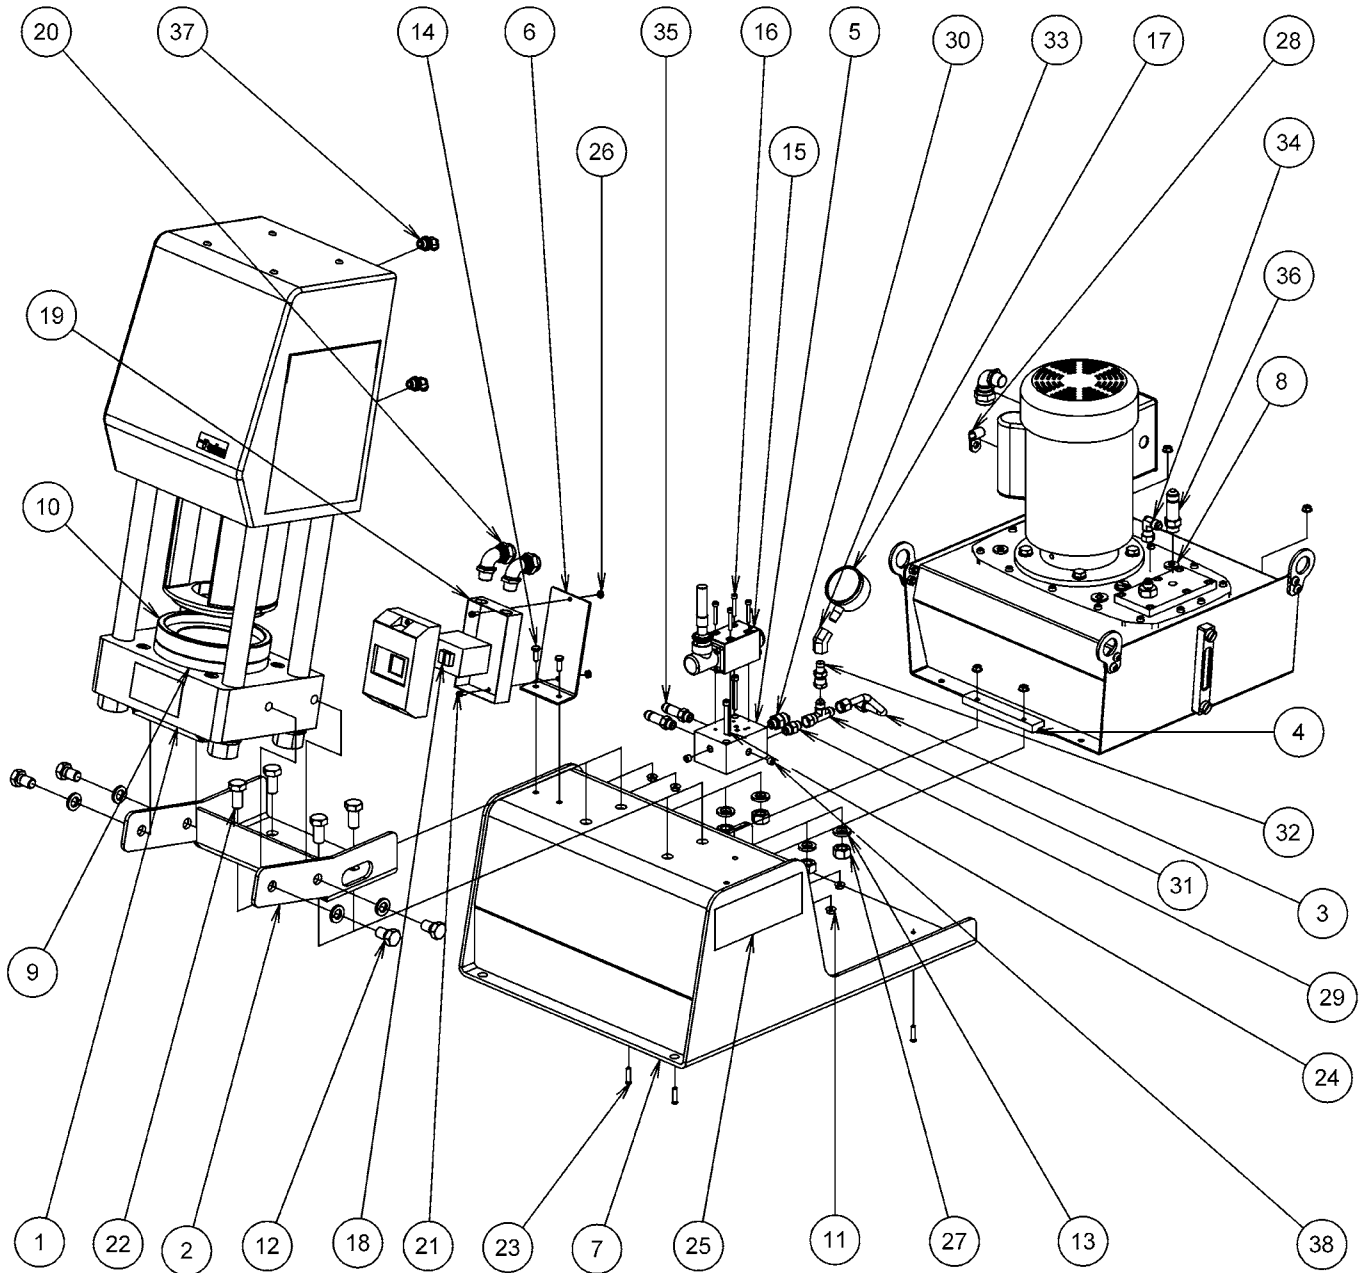

## Assembly Detail &amp; Parts List

ITEM	DESCRIPTION	PART NUMBER	QTY.
1	CRIMP HEAD ASSEMBLY	88C-080	1
2	BRACKET	88C-BRK	1
3	TUBE ASSEMBLY	88C-H01	1
4	HOLD BRACKET	88C-HBK	1
5	VALVE SUBPLATE	88C-HSP	1
6	SWITCH MOUNT	88C-SMT	1
7	STAND ASSEMBLY	88C-STD	1
8A	1 PHASE POWER UNIT FOR 88C-082	83C-PWR-1PH	1
8B	3 PHASE POWER UNIT FOR 88C-082	83C-PWR-3PH	1
9	ADAPTER BOWL ASSEMBLY	83C-0CB	1
10	SPACER RING	83C-R02	1
11	1/4-20 HEX NUT	802015	8
12	5/8-11 X 1" HEX HEAD BOLT	832180-3	4
13	5/8" SPRING LOCKWASHER	832180-4	8
14	1/4-20 X 3/4" HEX HEAD SCREW	832205-D	2
15	PARKER VALVE	881606-1	1
16	10-24 X 1-1/4 SOCKET HEAD CAP SCREW	881606-2	4
17	PRESSURE GAUGE	881612-2	1
18A	1 PHASE MOTOR STARTER FOR 88C-082	TH18-400-77	1
18B	3 PHASE MOTOR STARTER FOR 88C-082	TH18-400-108	1
19	MOTOR STARTER BOX	TH18-400-78	1
20	90° ALUMINUM CORD GRIP CONNECTOR	TH18-400-94	3
21	10-24 X 1/2" SOCKET HEAD CAP SCREW	TH18-B-46	2
22	5/8-11 X 1-1/4" HEX CAP SCREW	TH18-B-68	4
23	1/4" X 1" SELF CLINCHING STUD	TH18-B-69	4
24	1/4-20 X 2" SOCKET HEAD CAP SCREW	TH18-B-70	2
25	SERIAL NUMBER DECAL	892028	1
26	10-24 HEX NUT	TH18-N-2	2
27	5/8-11 GRADE 8 HEX NUT	TH18-N-28	4
28	INSULATED CLAMP	CL-9	1
29	TUBE FITTING ADAPTER	6 F5OX-S (0503-6-6)	1
30	TUBE FITTING ADAPTER	8-6 F5OX-S (0503-6-8)	1
31	TUBE FITTING ADAPTER	6 R6X-S (063T-6-6)	1
32	TUBE FITTING ADAPTER	6 F6X-S (0106-4-6)	1
33	TUBE FITTING ADAPTER	1/4 DD45-S (4204-4-4)	1
34	TUBE FITTING ADAPTER	6 C6X-S (3903-6-6)	1
35	TUBE FITTING ADAPTER	6 FF5OX-S (5E03-6-6)	2
36	TUBE FITTING ADAPTER	6 FF5OX-S (5E03-8-8)	1
37	TUBE FITTING ADAPTER	6 V5OX-S (3503-6-6)	2
38	TUBE FITTING ADAPTER	1/8HHP (01HP-2)	2
39	PARKER HOSE FITTING	30682-8-8	1
40	PARKER HOSE FITTING	33982-8-8	1
41	PARKER HOSE FITTING	13743-6-6	2
42	PARKER HOSE FITTING	10643-6-6	2
43	PARKER HOSE	801-8-GRA	1 FT
44	PARKER HOSE	381-6	5 FT
45	OPERATIONS AND TECHNICAL MANUAL	4480-T26-US	1
46	TRAINING CD	8XC-CD-ROM	1
47A	1 PHASE PLUG FOR 88C-082	881612-9	1
47B	3 PHASE PLUG FOR 88C-081	881612-10	1
48	14/4 TYPE SO CABLE	881612-12	10 FT
49A	1 PHASE RECEPTACLE FOR 88C-082	881612-13	1
49B	3 PHASE RECEPTACLE FOR 88C-081	881612-14	1
50	SPACER PLATE	83C-R02H	1

Assembly Detail & Parts List

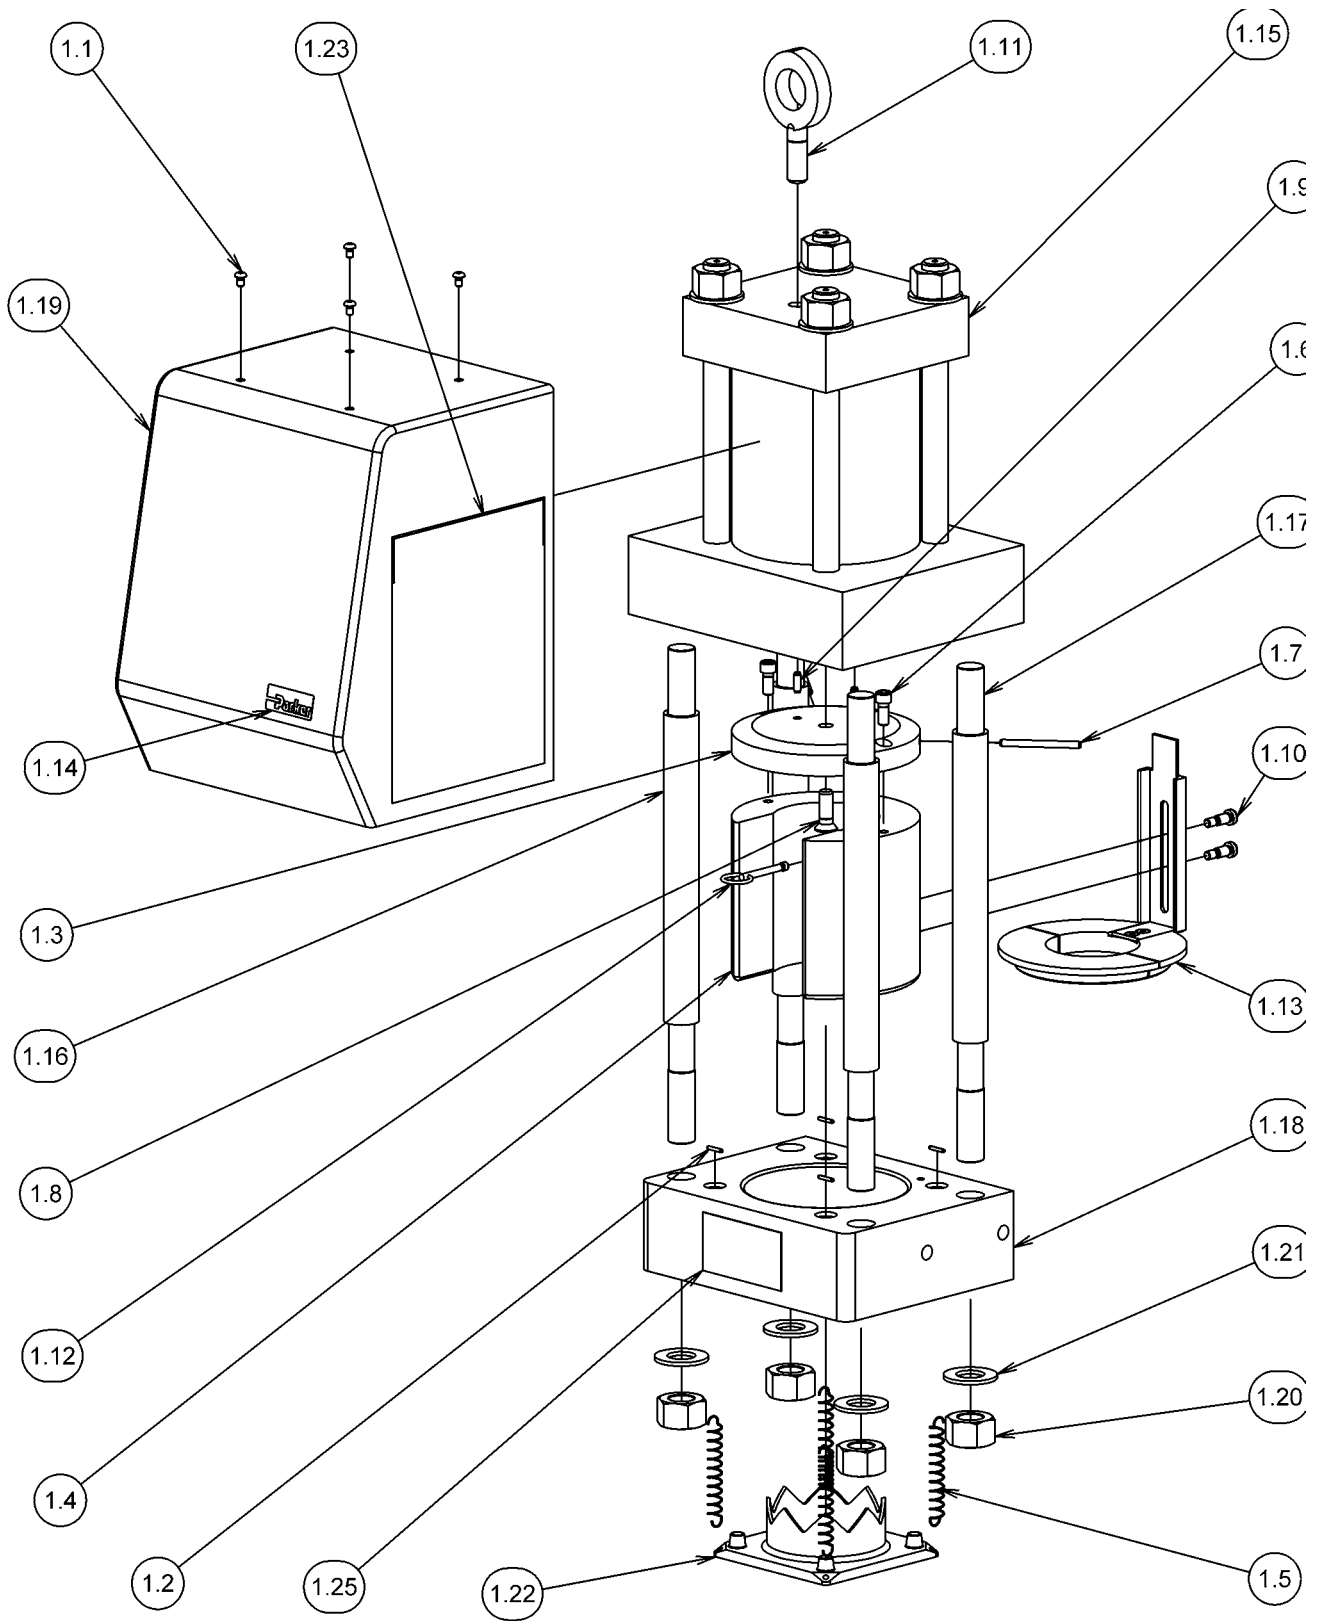

**Assembly Detail & Parts List**

ITEM	DESCRIPTION	PART NUMBER	QTY.
1.1	1/4-20 X 3/8" BHCS	802001	4
1.2	1/8" X 3/4" SPRING PIN	832001	4
1.3	PUSHER PLATE	832094	1
1.4	PUSHER	832098	1
1.5	DIE SEPARATOR SPRING	832166	4
1.6	3/8-16 X 7/8" SHCS	832180-1	2
1.7	1/4" X 3" SPRING PIN	832180-11	2
1.8	1/2-13 X 1-1/2 FHCS	832180-12	1
1.9	1/4" X 3/4" SPRING PIN	832180-13	2
1.10	3/8" X 3/8" SHOULDER BOLT	832180-15	2
1.11	HOIST RING	832181	1
1.12	SLIDE PIN ASSEMBLY	832195	1
1.13	SPLIT DIE RING ASSEMBLY	83C-R12	1
1.14	PARKER LOGO DECAL	881620-B	1
1.15**	CYLINDER	881647	1
1.16**	COMPRESSION SLEEVE	881648	4
1.17**	TIE ROD	881649	4
1.18**	BASE PLATE	881658	1
1.19	GUARD	892011	1
1.20**	1-14 UNS-2B GRADE 8 HEX NUT	892033-1	4
1.21**	HARDENED FLAT WASHER	892033-3	4
1.22	LARGE DIE SEPARATOR	88C-00S	1
1.23	CRIMP DECAL	88C-CRIMPDECAL	1
1.25	CRIMP CAUTION DECAL	DEC-CAUTION	1

## NOTES:

- Items marked \*\* are not sold individually, contact Technical Services.

The Superkrimp power unit is supplied to Parker by Enerpac. For warranty or repair on these pumps, contact Parker Technical Service Department at (440) 943-5700 and you will be put into contact with an approved Enerpac Service Center.

### ENERPAC Warranty Policy

For those ENERPAC items sold as part of the Parker product offering, the following warranty applies.

ENERPAC products are warranted to be free of defects in materials and workmanship under normal use for as long as they are owned by the original purchaser, subject to the exclusions and limitations described below. This warranty does not cover ordinary wear and tear, overloading, alterations, (including repairs or attempted repairs by parties other than ENERPAC or its authorized service representatives), improper fluid, use in a manner for which they are not intended or use which is contrary to instructions for the products.

THIS WARRANTY IS LIMITED TO NEW PRODUCTS SOLD THROUGH ENERPAC AUTHORIZED DISTRIBUTORS, ORIGINAL EQUIPMENT MANUFACTURERS OR OTHER DESIGNATED CHANNELS OF DISTRIBUTION. NO AGENT, EMPLOYEE, OR OTHER REPRESENTATIVE OF ENERPAC HAS THE AUTHORITY TO IN ANY WAY CHANGE OR AMEND THIS WARRANTY.

Electronic products and components are warranted against defects in material and workmanship for a period of two years from the date of purchase.

The following items supplied with ENERPAC products are excluded from this warranty:

- Components not manufactured by ENERPAC, including air motors, electric motors, gasoline engines, and diesel engines. Such items are warranted to the extent of the warranty provided by the manufacturers of such items.

If the customer believes a product is defective, the product must be delivered, or shipped freight prepaid, to the nearest ENERPAC Authorized Service Center. The customer should contact ENERPAC to locate an Authorized Service Center in the customer's area. Products that do not conform to this

warranty will be returned by ground transportation, freight prepaid.

THE FOREGOING WARRANT IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The remedy of repair, replacement or refund is customer's exclusive remedy in the event of breach of this warranty.

SELLER SHALL NOT BE SUBJECT TO AND DISCLAIMS:

(a) ANY OTHER OBLIGATIONS OR LIABILITIES ARISING OUT OF BREACH OF CONTRACT OR OF WARRANTY,

(b) ANY OBLIGATIONS WHATSOEVER ARISING FROM TORT CLAIMS (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR ARISING UNDER THEORIES OF LAW WITH RESPECT TO PRODUCTS SOLD OR SERVICES RENDERED BY SELLER OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO, AND

(c) ALL CONSEQUENTIAL, INCIDENTAL AND CONTINGENT DAMAGES WHATSOEVER.

ENERPAC's liability in all cases is limited to, and shall not exceed, the purchase price paid.

For the nearest authorized ENERPAC SERVICE CENTER, please call ENERPAC at 877-864-7722 or visit the ENERPAC WEB SITE at [www.enerpac.com](http://www.enerpac.com).



**Maintenance**

---

**Maintenance**

- Frequently inspect all system components (e.g., crimp bowls, dies, die rings, pusher, hoses, electrical cords) for signs of excessive wear, leakage or damage. Replace any worn or damaged component immediately. Any electrical repair or replacement may only be performed by a qualified electrician, adhering to all applicable local and national codes.

**DO NOT CONTINUE TO USE MACHINE WITH DAMAGED COMPONENTS.**

- Check hydraulic fluid level every 40 hours of operation. Oil should be visible in the reservoir sight glass. Add Enerpac HF oil if necessary by removing the fill port cap. Always be sure the cylinder is fully retracted before adding fluid to the reservoir.
- Completely drain and clean the reservoir, reservoir magnet and pick-up screen every 1000 hours of use or more frequently if machine is used in dirty environments. Refill the reservoir with Enerpac HF oil. The reservoir is full when visible in the sight glass.
- Turn the machine off when not in use. Allowing the machine to run continuously when not in use, may cause overheating. If oil temperature rises to 140°F, turn machine off and let cool to 120°F.
- Clean the crimp bowls of old grease on a weekly basis. Re-grease the crimp bowls after the bowl has been cleaned.
- Apply approved MOLY-GRADE lithium grease such as Citgo Lithoplex MP2, Dow Corning Molykote GN Assembly Paste or equivalent to the dies and crimp bowl each time the dies are changed. If dies are not changed through a day's operation, grease should be applied twice a day.
- In addition to the above preventative maintenance, it is strongly recommended that the machine crimp head be inspected and serviced every 5-6 years.  
Contact Parker Hose Products Division Technical Services department for crimper service information.

**Trouble Shooting Guide**

**If you have a problem with your Superkrimp machine:**

- **First** check that the proper tooling, hose and fitting combinations are being used as identified in the Parker Catalog 4400.
- **Then** check the following recommendations. If after the following suggested remedy, the problem persists, call our Technical Service Department at (440) 943-5700.

Symptoms	Possible Causes	What To Do
Power unit does not operate	Blown fuse(s)  Low voltage at motor  On-off switch faulty  Motor or pump assembly faulty	Replace with time-delay fuse(s) or circuit breaker(s) and check for the cause of the overload.  Call a qualified electrician.  Disconnect power. Replace off-on switch.  See Enerpac instructions on page 16
Power unit stalls before pusher bottoms out	Low voltage at motor  Lack of lubrication between dies and die cavity  Wrong fitting, hose or die ring combination	Call a qualified electrician.  Lubricate die cavity with approved MOLY-GRADE lithium grease such as Citgo Lithoplex MP2, Dow Corning Molykote GN Assembly Paste or equivalent.  Use correct combination. See Catalog No. 4400.
Motor vibrates or is excessively noisy	High voltage  Motor fan loose, damaged, or out of balance	Call a qualified electrician.  With power disconnected, remove motor fan guard. Tighten fan screw(s), or repair fan or fan guard by straightening. If problem continues, call Enerpac.
Power unit runs but cylinder does not move up or down when valve handle is actuated.	Low oil supply  Incorrect motor rotation.	Refill oil reservoir with Enerpac hydraulic oil only. Tank capacity is 5 gallons.  Verify proper motor rotation with arrow on side

Trouble Shooting Guide

Symptoms	Possible Causes	What To Do
Valve leaks	Valve hold down bolts loose O-rings at valve	Tighten hold down bolts to 50-60 inch pounds. Replace O-rings.
Coupling crimp diameter above or below specification.	Wrong fitting style being used Wrong hose being used. Wrong die ring being used Pusher is not being bottomed out on die ring and base plate (usually inconsistent crimp diameters) Relief valve set too low High or low voltage Worn, damaged or faulty die ring Low on oil Crimp dies or die rings damaged, worn or faulty Die cavity in base plate or adapter bowl worn or faulty	Only approved fittings can be used with the Superkrimp machine. For a complete selection and correct combinations of hose and fittings, see Parker Catalog 4400. Use only Parker No-Skive hose. For a complete selection of hose and fittings, see Parker Catalog 4400. See crimper decal or Parker Catalog 4400 for correct die ring. Lubricate die cavity with approved MOLY-GRADE lithium grease such as Citgo Lithoplex MP2, Dow Corning Molykote GN Assembly Paste or equivalent. Bottom out pusher on the die ring completely. When bottomed, you will hear the relief valve open. The pressure gauge should read 5,000-5,300 psi. Relief valve setting should be 5000 psi. Relief valve can only be set at factory. Call a qualified electrician. Replace die ring. Refill oil reservoir with Enerpac oil only. Tank capacity is 5 gallons. Visually inspect all wear surfaces for raised metal dent or gouges. Replace damaged die sets or die rings. Worn or faulty die sets will crimp above or below specification by the same amount with both the silver <b>and</b> black die rings. Replace worn or faulty die sets. Lubricate the die cavity in base plate frequently to prevent wear. Check crimp diameter of several different sizes of die sets with <b>both</b> the silver and black die rings. If all crimp diameters are out of specification by the same amount, the die cavity in the base plate or adapter bowl may be out of specification. Contact Technical Service Department for repair. Lubricate the die cavity in the bowls frequently to prevent wear.

# Safety Guide for Selecting and Using Hose, Fittings and Related Accessories



## Parker Safety Guide for Selecting and Using Hose, Tubing, Fittings and Related Accessories

Parker Publication No. 4400-B.1

Revised: May, 2002

**WARNING:** Failure or improper selection or improper use of hose, tubing, fittings, assemblies or related accessories ("Products") can cause death, personal injury and property damage. Possible consequences of failure or improper selection or improper use of these Products include but are not limited to:

- Fittings thrown off at high speed.
- High velocity fluid discharge.
- Explosion or burning of the conveyed fluid.
- Electrocution from high voltage electric powerlines.
- Contact with suddenly moving or falling objects that are controlled by the conveyed fluid.
- Injections by high-pressure fluid discharge.
- Dangerously whipping Hose.
- Contact with conveyed fluids that may be hot, cold, toxic or otherwise injurious.
- Sparking or explosion caused by static electricity buildup or other sources of electricity.
- Sparking or explosion while spraying paint or flammable liquids.
- Injuries resulting from inhalation, ingestion or exposure to fluids.

Before selecting or using any of these Products, it is important that you read and follow the instructions below. Only Hose from Parker's Stratoflex Products Division is approved for in flight aerospace applications, and no other Hose can be used for such in flight applications.

### 1.0 GENERAL INSTRUCTIONS

- 1.1 Scope:** This safety guide provides instructions for selecting and using (including assembling, installing, and maintaining) these Products. For convenience, all rubber and/or thermoplastic products commonly called "hose" or "tubing" are called "Hose" in this safety guide. All assemblies made with Hose are called "Hose Assemblies". All products commonly called "fittings" or "couplings" are called "Fittings". All related accessories (including crimping and swaging machines and tooling) are called "Related Accessories". This safety guide is a supplement to and is to be used with, the specific Parker publications for the specific Hose, Fittings and Related Accessories that are being considered for use.
- 1.2 Fail-Safe:** Hose, and Hose Assemblies and Fittings can and do fail without warning for many reasons. Design all systems and equipment in a fail-safe mode, so that failure of the Hose or Hose Assembly or Fitting will not endanger persons or property.
- 1.3 Distribution:** Provide a copy of this safety guide to each person that is responsible for selecting or using Hose and Fitting products. Do not select or use Parker Hose or Fittings without thoroughly reading and understanding this safety guide as well as the specific Parker publications for the products considered or selected.
- 1.4 User Responsibility:** Due to the wide variety of operating conditions and applications for Hose and Fittings, Parker and its distributors do not represent or warrant that any particular Hose or Fitting is suitable for any specific end use system. This safety guide does not analyze all technical parameters that must be considered in selecting a product. The user, through its own analysis and testing, is solely responsible for:
- Making the final selection of the Hose and Fitting.
  - Assuring that the user's requirements are met and that the application presents no health or safety hazards.
  - Providing all appropriate health and safety warnings on the equipment on which the Hose and Fittings are used.
  - Assuring compliance with all applicable government and industry standards.
- 1.5 Additional Questions:** Call the appropriate Parker technical service department if you have any questions or require any additional information. See the Parker publication for the product being considered or used, or call 1-800-CPARKER, or go to [www.parker.com](http://www.parker.com), for telephone numbers of the appropriate technical service department.

### 2.0 HOSE AND FITTING SELECTION INSTRUCTIONS

- 2.1 Electrical Conductivity:** Certain applications require that the Hose be nonconductive to prevent electrical current flow. Other applications require the Hose and the Fitting and the Hose/Fitting interface to be sufficiently conductive to drain off static electricity. Extreme care must be exercised when selecting Hose and Fittings for these or any other applications in which electrical conductivity or nonconductivity is a factor.
- The electrical conductivity or nonconductivity of Hose and Fittings is dependent upon many factors and may be susceptible to change. These factors include but are not limited to the various materials used to make the Hose and the Fittings, Fitting finish (some Fitting finishes are electrically conductive while others are nonconductive), manufacturing methods (including moisture control), how the Fittings contact the Hose, age and amount of deterioration or damage or other changes, moisture content of the Hose at any particular time, and other factors.
- The following are considerations for electrically nonconductive and conductive Hose. For other applications consult the individual catalog pages and the appropriate industry or regulatory standards for proper selection.

- 2.1.1 Electrically Nonconductive Hose:** Certain applications require that the Hose be nonconductive to prevent electrical current flow or to maintain electrical isolation. For these applications that require Hose to be electrically nonconductive, including but not limited to applications near high voltage electric lines, only special nonconductive Hose can be used. The manufacturer of the equipment in which the nonconductive Hose is to be used must be consulted to be certain that the Hose and Fittings that are selected are proper for the application. Do not use any Parker Hose or Fitting for any such application requiring nonconductive Hose, including but not limited to applications near high voltage electric lines, unless (i) the application is expressly approved in the Parker technical publication for the product, (ii) the Hose is marked "nonconductive", and (iii) the manufacturer of the equipment on which the Hose is to be used specifically approves the particular Parker Hose and Fitting for such use.

- 2.1.2 Electrically Conductive Hose:** Parker manufactures special Hose for certain applications that require electrically conductive Hose.

Parker manufactures special Hose for conveying paint in airless paint spraying applications. This Hose is labeled "Electrically Conductive Airless Paint Spray Hose" on its layline and packaging. This Hose must be properly connected to the appropriate Parker Fittings and properly grounded in order to dissipate dangerous static charge buildup, which occurs in all airless paint spraying applications. Do not use any other Hose for airless paint spraying, even if electrically conductive. Use of any other Hose or failure to properly connect the Hose can cause a fire or an explosion resulting in death, personal injury, and property damage.

Parker manufactures a special Hose for certain compressed natural gas ("CNG") applications where static electricity buildup may occur. Parker CNG Hose assemblies comply with AGA Requirements 1-93, "Hoses for Natural Gas Vehicles and Fuel Dispensers". This Hose is labeled "Electrically Conductive for CNG Use" on its layline and packaging. This Hose must be properly connected to the appropriate Parker Fittings and properly grounded in order to dissipate dangerous static charge buildup, which occurs in, for example, high velocity CNG dispensing or transfer. Do not use any other Hose for CNG applications where static charge buildup may occur, even if electrically conductive. Use of other Hoses in CNG applications or failure to properly connect or ground this Hose can cause a fire or an explosion resulting in death, personal injury, and property damage. Care must also be taken to protect against CNG permeation through the Hose wall. See section 2.6, Permeation, for more information. Parker CNG Hose is intended for dispenser and vehicle use at a maximum temperature of 180°F. Parker CNG Hose should not be used in confined spaces or unventilated areas or areas exceeding 180°F. Final assemblies must be tested for leaks. CNG Hose Assemblies should be tested on a monthly basis for conductivity per AGA 1-93.

Parker manufactures special Hose for aerospace in flight applications. Aerospace in flight applications employing Hose to transmit fuel, lubricating fluids and hydraulic fluids require a special Hose with a conductive inner tube. This Hose for in flight applications is available only from Parker's Stratoflex Products Division. Do not use any other Parker Hose for in flight applications, even if electrically conductive. Use of other Hoses for in flight applications or failure to properly connect or ground this Hose can cause a fire or an explosion resulting in death, personal injury, and property damage. These Hose assemblies for in flight applications must meet all applicable aerospace industry, aircraft engine, and aircraft requirements.

## Safety Guide for Selecting and Using Hose, Fittings and Related Accessories

- 2.2 Pressure:** Hose selection must be made so that the published maximum recommended working pressure of the Hose is equal to or greater than the maximum system pressure. Surge pressures or peak transient pressures in the system must be below the published maximum working pressure for the Hose. Surge pressures and peak pressures can usually only be determined by sensitive electrical instrumentation that measures and indicates pressures at millisecond intervals. Mechanical pressure gauges indicate only average pressures and cannot be used to determine surge pressures or peak transient pressures. Published burst pressure ratings for Hose is for manufacturing test purposes only and is no indication that the Product can be used in applications at the burst pressure or otherwise above the published maximum recommended working pressure.
- 2.3 Suction:** Hoses used for suction applications must be selected to insure that the Hose will withstand the vacuum and pressure of the system. Improperly selected Hose may collapse in suction application.
- 2.4 Temperature:** Be certain that fluid and ambient temperatures, both steady and transient, do not exceed the limitations of the Hose. Temperatures below and above the recommended limit can degrade Hose to a point where a failure may occur and release fluid. Properly insulate and protect the Hose Assembly when routing near hot objects (e.g. manifolds). Do not use any Hose in any application where failure of the Hose could result in the conveyed fluids (or vapors or mist from the conveyed fluids) contacting any open flame, molten metal, or other potential fire ignition source that could cause burning or explosion of the conveyed fluids or vapors.
- 2.5 Fluid Compatibility:** Hose Assembly selection must assure compatibility of the Hose tube, cover, reinforcement, and Fittings with the fluid media used. See the fluid compatibility chart in the Parker publication for the product being considered or used. This information is offered only as a guide. Actual service life can only be determined by the end user by testing under all extreme conditions and other analysis. Hose that is chemically compatible with a particular fluid must be assembled using Fittings and adapters containing likewise compatible seals.
- 2.6 Permeation:** Permeation (that is, seepage through the Hose) will occur from inside the Hose to outside when Hose is used with gases, liquid and gas fuels, and refrigerants (including but not limited to such materials as helium, diesel fuel, gasoline, natural gas, or LPG). This permeation may result in high concentrations of vapors which are potentially flammable, explosive, or toxic, and in loss of fluid. Dangerous explosions, fires, and other hazards can result when using the wrong Hose for such applications. The system designer must take into account the fact that this permeation will take place and must not use Hose if this permeation could be hazardous. The system designer must take into account all legal, government, insurance, or any other special regulations which govern the use of fuels and refrigerants. Never use a Hose even though the fluid compatibility is acceptable without considering the potential hazardous effects that can result from permeation through the Hose Assembly. Permeation of moisture from outside the Hose to inside the Hose will also occur in Hose assemblies, regardless of internal pressure. If this moisture permeation would have detrimental effects (particularly, but not limited to refrigeration and air conditioning systems), incorporation of sufficient drying capacity in the system or other appropriate system safeguards should be selected and used.
- 2.7 Size:** Transmission of power by means of pressurized fluid varies with pressure and rate of flow. The size of the components must be adequate to keep pressure losses to a minimum and avoid damage due to heat generation or excessive fluid velocity.
- 2.8 Routing:** Attention must be given to optimum routing to minimize inherent problems (kinking or flow restriction due to Hose collapse, twisting of the Hose, proximity to hot objects or heat sources).
- 2.9 Environment:** Care must be taken to insure that the Hose and Fittings are either compatible with or protected from the environment (that is, surrounding conditions) to which they are exposed. Environmental conditions including but not limited to ultraviolet radiation, sunlight, heat, ozone, moisture, water, salt water, chemicals, and air pollutants can cause degradation and premature failure.
- 2.10 Mechanical Loads:** External forces can significantly reduce Hose life or cause failure. Mechanical loads which must be considered include excessive flexing, twist, kinking, tensile or side loads, bend radius, and vibration. Use of swivel type Fittings or adapters may be required to insure no twist is put into the Hose. Unusual applications may require special testing prior to Hose selection.
- 2.11 Physical Damage:** Care must be taken to protect Hose from wear, snagging, kinking, bending smaller than minimum bend radius, and cutting, any of which can cause premature Hose failure. Any Hose that has been kinked or bent to a radius smaller than the minimum bend radius, and any Hose that has been cut or is cracked or is otherwise damaged, should be removed and discarded.
- 2.12 Proper End Fitting:** See instructions 3.2 through 3.5. These recommendations may be substantiated by testing to industry standards such as SAE J517 for hydraulic applications, or MIL-A-5070, AS1339, or AS3517 for Hoses from Parker's Stratoflex Products Division for aerospace applications.
- 2.13 Length:** When establishing a proper Hose length, motion absorption, Hose length changes due to pressure, and Hose and machine tolerances and movement must be considered.
- 2.14 Specifications and Standards:** When selecting Hose and Fittings, government, industry, and Parker specifications and recommendations must be reviewed and followed as applicable.
- 2.15 Hose Cleanliness:** Hose components may vary in cleanliness levels. Care must be taken to insure that the Hose Assembly selected has an adequate level of cleanliness for the application.
- 2.16 Fire Resistant Fluids:** Some fire resistant fluids that are to be conveyed by Hose require use of the same type of Hose as used with petroleum base fluids. Some such fluids require a special Hose, while a few fluids will not work with any Hose at all. See instructions 2.5 and 1.5. The wrong Hose may fail after a very short service. In addition, all liquids but pure water may burn fiercely under certain conditions, and even pure water leakage may be hazardous.
- 2.17 Radiant Heat:** Hose can be heated to destruction without contact by such nearby items as hot manifolds or molten metal. The same heat source may then initiate a fire. This can occur despite the presence of cool air around the Hose.
- 2.18 Welding or Brazing:** When using a torch or arc-welder in close proximity to hydraulic lines, the hydraulic lines should be removed or shielded with appropriate fire resistant materials. Flame or weld spatter could burn through the Hose and possibly ignite escaping fluid resulting in a catastrophic failure. Heating of plated parts, including Hose Fittings and adapters, above 450°F (232°C) such as during welding, brazing, or soldering may emit deadly gases.
- 2.19 Atomic Radiation:** Atomic radiation affects all materials used in Hose assemblies. Since the long-term effects may be unknown, do not expose Hose assemblies to atomic radiation.
- 2.20 Aerospace Applications:** The only Hose and Fittings that may be used for in flight aerospace applications are those available from Parker's Stratoflex Products Division. Do not use any other Hose or Fittings for in flight applications. Do not use any Hose or Fittings from Parker's Stratoflex Products Division with any other Hose or Fittings, unless expressly approved in writing by the engineering manager or chief engineer of Stratoflex Products Division and verified by the user's own testing and inspection to aerospace industry standards.
- 2.21 Unlocking Couplings:** Ball locking couplings or other couplings with disconnect sleeves can unintentionally disconnect if they are dragged over obstructions or if the sleeve is bumped or moved enough to cause disconnect. Threaded couplings should be considered where there is a potential for accidental uncoupling.
- 3.0 HOSE AND FITTING ASSEMBLY AND INSTALLATION INSTRUCTIONS**
- 3.1 Component Inspection:** Prior to assembly, a careful examination of the Hose and Fittings must be performed. All components must be checked for correct style, size, catalog number, and length. The Hose must be examined for cleanliness, obstructions, blisters, cover looseness, kinks, cracks, cuts or any other visible defects. Inspect the Fitting and sealing surfaces for burrs, nicks, corrosion or other imperfections. Do NOT use any component that displays any signs of nonconformance.
- 3.2 Hose and Fitting Assembly:** Do not assemble a Parker Fitting on a Parker Hose that is not specifically listed by Parker for that Fitting, unless authorized in writing by the engineering manager or chief engineer of the appropriate Parker division. Do not assemble a Parker Fitting on another manufacturer's Hose or a Parker Hose on another manufacturer's Fitting unless (i) the engineering manager or chief engineer of the appropriate Parker division approves the Assembly in writing or that combination is expressly approved in the appropriate Parker literature for the specific Parker product, and (ii) the user verifies the Assembly and the application through analysis and testing. For Parker Hose that does not specify a Parker Fitting, the user is solely responsible for the selection of the proper Fitting and Hose Assembly procedures. See instruction 1.4. The Parker published instructions must be followed for assembling the Fittings on the Hose. These instructions are provided in the Parker Fitting catalog for the specific Parker Fitting being used, or by calling 1-800-CPARKER, or at [www.parker.com](http://www.parker.com).
- 3.3 Related Accessories:** Do not crimp or swage any Parker Hose or Fitting with anything but the listed swage or crimp machine and dies in accordance with Parker published instructions. Do not crimp or swage another manufacturer's Fitting with a Parker crimp or swage die unless authorized in writing by the engineering manager or chief engineer of the appropriate Parker division.
- 3.4 Parts:** Do not use any Parker Fitting part (including but not limited to socket, shell, nipple, or insert) except with the correct Parker mating parts, in accordance with Parker published instructions, unless authorized in writing by the engineering manager or chief engineer of the appropriate Parker division.
- 3.5 Reusable/Permanent:** Do not reuse any field attachable (reusable) Hose Fitting that has blown or pulled off a Hose. Do not reuse a Parker permanent Hose Fitting (crimped or swaged) or any part thereof. Complete Hose Assemblies may only be reused after proper inspection under section 4.0. Do not assemble Fittings to any previously used hydraulic Hose that was in service, for use in a fluid power application.
- 3.6 Pre-Installation Inspection:** Prior to installation, a careful examination of the Hose Assembly must be performed. Inspect the Hose Assembly for any damage or defects. Do NOT use any Hose Assembly that displays any signs of nonconformance.

- 3.7 Minimum Bend Radius:** Installation of a Hose at less than the minimum listed bend radius may significantly reduce the Hose life. Particular attention must be given to preclude sharp bending at the Hose to Fitting juncture. Any bending during installation at less than the minimum bend radius must be avoided. If any Hose is kinked during installation, the Hose must be discarded.
- 3.8 Twist Angle and Orientation:** Hose Assembly installation must be such that relative motion of machine components does not produce twisting.
- 3.9 Securement:** In many applications, it may be necessary to restrain, protect, or guide the Hose to protect it from damage by unnecessary flexing, pressure surges, and contact with other mechanical components. Care must be taken to insure such restraints do not introduce additional stress or wear points.
- 3.10 Proper Connection of Ports:** Proper physical installation of the Hose Assembly requires a correctly installed port connection insuring that no twist or torque is transferred to the Hose when the Fittings are being tightened or otherwise during use.
- 3.11 External Damage:** Proper installation is not complete without insuring that tensile loads, side loads, kinking, flattening, potential abrasion, thread damage, or damage to sealing surfaces are corrected or eliminated. See instruction 2.10.
- 3.12 System Checkout:** All air entrapment must be eliminated and the system pressurized to the maximum system pressure (at or below the Hose maximum working pressure) and checked for proper function and freedom from leaks. Personnel must stay out of potential hazardous areas while testing and using.
- 3.13 Routing:** The Hose Assembly should be routed in such a manner so if a failure does occur, the escaping media will not cause personal injury or property damage. In addition, if fluid media comes in contact with hot surfaces, open flame, or sparks, a fire or explosion may occur. See section 2.4.

#### 4.0 HOSE AND FITTING MAINTENANCE AND REPLACEMENT INSTRUCTIONS

- 4.1** Even with proper selection and installation, Hose life may be significantly reduced without a continuing maintenance program. The severity of the application, risk potential from a possible Hose failure, and experience with any Hose failures in the application or in similar applications should determine the frequency of the inspection and the replacement for the Products so that Products are replaced before any failure occurs. A maintenance program must be established and followed by the user and, at minimum, must include instructions 4.2 through 4.7.
- 4.2 Visual Inspection Hose/Fitting:** Any of the following conditions require immediate shut down and replacement of the Hose Assembly:
- Fitting slippage on Hose,
  - Damaged, cracked, cut or abraded cover (any reinforcement exposed);
  - Hard, stiff, heat cracked, or charred Hose;
  - Cracked, damaged, or badly corroded Fittings;
  - Leaks at Fitting or in Hose;
  - Kinked, crushed, flattened or twisted Hose; and
  - Blistered, soft, degraded, or loose cover.
- 4.3 Visual Inspection All Other:** The following items must be tightened, repaired, corrected or replaced as required:
- Leaking port conditions;
  - Excess dirt buildup;
  - Worn clamps, guards or shields; and
  - System fluid level, fluid type, and any air entrapment.
- 4.4 Functional Test:** Operate the system at maximum operating pressure and check for possible malfunctions and leaks. Personnel must avoid potential hazardous areas while testing and using the system. See section 2.2.
- 4.5 Replacement Intervals:** Hose assemblies and elastomeric seals used on Hose Fittings and adapters will eventually age, harden, wear and deteriorate under thermal cycling and compression set. Hose Assemblies and elastomeric seals should be inspected and replaced at specific replacement intervals, based on previous service life, government or industry recommendations, or when failures could result in unacceptable downtime, damage, or injury risk.  
See section 1.2.
- 4.6 Hose Inspection and Failure:** Hydraulic power is accomplished by utilizing high-pressure fluids to transfer energy and do work. Hoses, Fittings, and Hose Assemblies all contribute to this by transmitting fluids at high pressures. Fluids under pressure can be dangerous and potentially lethal and, therefore, extreme caution must be exercised when working with fluids under pressure and handling the Hoses transporting the fluids. From time to time, Hose Assemblies will fail if they are not replaced at proper time intervals. Usually these failures are the result of some form of misapplication, abuse, wear, or failure to perform proper maintenance. When Hoses fail, generally the high-pressure fluids inside escape in a stream which may or may not be visible to the user. Under no circumstances should the user attempt to locate the leak by "feeling" with their hands or any other part of their body. High-pressure fluids can and will penetrate the skin and cause severe tissue damage and possibly loss of limb. Even seemingly minor hydraulic fluid injection injuries must be treated immediately by a physician with knowledge of the tissue damaging properties of hydraulic fluid.

If a Hose failure occurs, immediately shut down the equipment and leave the area until pressure has been completely released from the Hose Assembly. Simply shutting down the hydraulic pump may or may not eliminate the pressure in the Hose Assembly. Many times check valves, etc., are employed in a system and can cause pressure to remain in a Hose Assembly even when pumps or equipment are not operating. Tiny holes in the Hose, commonly known as pinholes, can eject small, dangerously powerful but hard to see streams of hydraulic fluid. It may take several minutes or even hours for the pressure to be relieved so that the Hose Assembly may be examined safely.

Once the pressure has been reduced to zero, the Hose Assembly may be taken off the equipment and examined. It must always be replaced if a failure has occurred. Never attempt to patch or repair a Hose Assembly that has failed. Consult the nearest Parker distributor or the appropriate Parker division for Hose Assembly replacement information.

Never touch or examine a failed Hose Assembly unless it is obvious that the Hose no longer contains fluid under pressure. The high-pressure fluid is extremely dangerous and can cause serious and potentially fatal injury.

- 4.7 Elastomeric seals:** Elastomeric seals will eventually age, harden, wear and deteriorate under thermal cycling and compression set. Elastomeric seals should be inspected and replaced.
- 4.8 Refrigerant gases:** Special care should be taken when working with refrigeration systems. Sudden escape of refrigerant gases can cause blindness if the escaping gases contact the eye and can cause freezing or other severe injuries if it contacts any other portion of the body.
- 4.9 Compressed natural gas (CNG):** Parker CNG Hose Assemblies should be tested after installation and before use, and at least on a monthly basis per AGA 1-93 Section 4.2 "Visual Inspection Hose/Fitting". The recommended procedure is to pressurize the Hose and check for leaks and to visually inspect the Hose for damage.

**Caution:** Matches, candles, open flame or other sources of ignition shall not be used for Hose inspection. Leak check solutions should be rinsed off after use.

#### MSDS'S (Available upon request.)

Federal OSHA regulation 29 CFR 1910.1200 requires that we transmit to our customers Material Safety Data Sheets for all material covered under the law. If you are an employer in SIC 20-39 who has not yet received them, you are required to obtain them from us and provide the information to employees as directed in Section (b) of the regulation. Please contact the Hose Products Division - Technical Services Department: (PH) 440- 943-5700 (FAX) 440- 943-3129.



## Offer of Sale

The items described in this document and other documents or descriptions provided by Parker Hannifin Corporation, as subsidiaries and its authorized distributors are hereby offered for sale at prices to be established by Parker Hannifin Corporation, its subsidiaries and its authorized distributors. This offer and its acceptance by any customer ("Buyer") shall be governed by all of the following Terms and Conditions. Buyer's order for any such item, when communicated to Parker Hannifin Corporation, its subsidiary or an authorized distributor ("Seller") verbally or in writing, shall constitute acceptance of this offer.

1. Terms and Conditions of Sale: All descriptions, quotations, proposals, offers, acknowledgments, acceptances and sales of Seller's products are subject to and shall be governed exclusively by the terms and conditions stated herein. Buyer's acceptance of any offer to sell is limited to these terms and conditions. Any terms or conditions in addition to, or inconsistent with those stated herein, proposed by Buyer in any acceptance of an offer by Seller, are hereby objected to. No such additional, different or inconsistent terms and conditions shall become part of the contract between Buyer and Seller unless expressly accepted in writing by Seller. Seller's acceptance of any offer to purchase by Buyer is expressly conditional upon Buyer's assent to all the terms and conditions stated herein, including any terms in addition to, or inconsistent with those contained in Buyer's offer. Acceptance of Seller's products shall in all events constitute such assent.

2. Payment: Payment shall be made by Buyer net 30 days from the date of delivery of the items purchased hereunder. Any claims by Buyer for omissions or shortages in a shipment shall be waived unless Seller receives notice thereof within 30 days after Buyer's receipt of the shipment.

3. Delivery: Unless otherwise provided on the face hereof, delivery shall be made F.O.B. Seller's plant. Regardless of the method of delivery, however, risk of loss shall pass to Buyer upon Seller's delivery to a carrier. Any delivery dates shown are approximate only and Seller shall have no liability for any delays in delivery.

4. Warranty: Seller warrants that the items sold thereunder shall be free from defects in material or workmanship for a period of 365 days from the date of shipment to Buyer, or 2,000 hours of use, whichever expires first. **THIS WARRANTY COMPRISES THE SOLE AND ENTIRE WARRANTY PERTAINING TO ITEMS PROVIDED HEREUNDER. SELLER MAKES NO OTHER WARRANTY, GAURANTEE, OR REPRESENTATION OF ANY KIND WHATSOEVER. ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO, MERCHANTABILITY AND FITNESS FOR PURPOSE, WHETHER EXPRESS, IMPLIED, OR ARISING BY OPERATION OF LAW, TRADE USAGE, OR COURSE OF DEALING ARE HEREBY DISCLAIMED. NOTWITHSTANDING THE FOREGOING, THERE ARE NO WARRANTIES WHATSOEVER ON ITEMS BUILT OR ACQUIRED WHOLELY OR PARTIALLY, TO BUYER'S DESIGNS OR SPECIFICATIONS.**

5. Limitation Of Remedy: SELLER'S LIABILITY ARISING FROM OR IN ANY WAY CONNECTED WITH THE ITEMS SOLD OR THIS CONTRACT SHALL BE LIMITED EXCLUSIVELY TO REPAIR OR REPLACEMENT OF THE ITEMS SOLD OR REFUND OF THE PURCHASE PRICE PAID BY BUYER, AT SELLER'S SOLE OPTION. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND OR NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS ARISING FROM OR IN ANY WAY CONNECTED WITH THIS AGREEMENT OR ITEMS SOLD HEREUNDER, WHETHER ALLEGED TO ARISE FROM BREACH OF CONTRACT, EXPRESS OR IMPLIED WARRANTY, OR IN TORT, INCLUDING WITHOUT LIMITATION, NEGLIGENCE, FAILURE TO WARN OR STRICT LIABILITY.

6. Changes, Reschedules and Cancellations: Buyer may request to modify the designs or specifications for the items sold herunder as well as the quantities and delivery dates thereof, or may request to cancel all or part of this order, however, no such requested modification or cancellation shall become part of the contract between Buyer and Seller unless accepted by Seller in a written amendment to this Agreement. Acceptance of any such requested modification or cancellation shall be at Seller's discretion, and shall be upon such terms and conditions as Seller may require.

7. Special Tooling: A tooling charge may be imposed for any special tooling, including without limitation, dies, fixtures, molds and patterns, acquired to manufacture items sold pursuant to this contract. Such special tooling shall be and remain Seller's property notwithstanding payment of any charges by Buyer. In no event will Buyer acquire any interest in apparatus belonging to Seller which is utilized in the manufacture of the items sold hereunder, even if such apparatus has been specially converted or adapted for such manufacture and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller

shall have the right to alter, discard or otherwise dispose of any special tooling or other property in its sole discretion at any time.

8. Buyer's Property: Any designs, tools, patterns, materials, drawings, confidential information or equipment furnished by Buyer or any other items which become Buyer's property, may be considered obsolete and may be destroyed by Seller after two (2) consecutive years have elapsed without Buyer placing an order for the items which are manufactured using such property. Seller shall not be responsible for any loss or damage to such property while it is in Seller's possession or control.

9. Taxes: Unless otherwise indicated on the face hereof, all prices and charges are exclusive of excise, sales, use, property, occupational or like taxes which may be imposed by any taxing authority upon the manufacture, sale or delivery of the items sold hereunder. If any such taxes must be paid by Seller or if Seller is liable for the collection of such tax, the amount thereof shall be in addition to the amounts for the items sold. Buyer agrees to pay all such taxes or to reimburse Seller therefore upon receipt of its invoice. If Buyer claims exemption from any sales, use or other tax imposed by any taxing authority, Buyer shall save Seller harmless from and against any such tax, together with any interest or penalties thereon which may be assessed if the items are held to be taxable.

10. Indemnity For Infringement of Intellectual Property Rights: Seller shall have no liability for infringement of any patents, trademarks, copyrights, trade dress, trade secrets or similar rights except as provided in this Part 10. Seller will defend and indemnify Buyer against allegations of infringement of U.S. patents, U.S. trademarks, copyrights, trade dress and trade secrets (hereinafter "Intellectual Property Rights"). Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on an allegation that an item sold pursuant to this contract infringes in the Intellectual Property Rights of a third party. Seller's obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of such allegations of infringement, and Seller having sole control over the defense of any allegations or actions including all negotiations for settlement or compromise. If an item sold hereunder is subject to a claim that it infringes the Intellectual Property Rights of a third party, Seller may, at its sole expense and options, procure for Buyer the right to continue using said item, replace or modify said item so as to make it noninfringing, or offer to accept return of said item and return the purchase price less a reasonable allowance for depreciation. Notwithstanding the foregoing, Seller shall have no liability for claims of infringement based on information provided by Buyer, or directed to items delivered hereunder for which the designs are specified in whole or part by Buyer, or infringements resulting from the modification, combination or use in a system of any item sold hereunder. The foregoing provisions of this Part 10 shall constitute Seller's sole and exclusive liability and Buyer's sole and exclusive remedy for infringement of Intellectual Property Rights.

If a claim is based on information provided by Buyer or if the design for an item delivered hereunder is specified in whole or in part by Buyer, Buyer shall defend and indemnify Seller for all costs, expenses or judgments resulting from any claim that such item infringes any patent, trademark, copyright, trade dress, trade secret or any similar right.

11. Force Majeure: Seller does not assume the risk of and shall not be liable for delay or failure to perform any of Seller's obligations by reason of circumstances beyond the reasonable control of Seller (hereinafter "Events of Force Majeure"). Events of Force Majeure shall include without limitation, accidents, acts of God, strikes or labor disputes, acts, laws, rules or regulations of any government or government agency, fires, floods, delays or failures in delivery of carriers or suppliers, shortages of materials and any other cause beyond Seller's control.

12. Entire Agreement/Governing Law: The terms and conditions set forth herein, together with any amendments, modifications and any different terms or conditions expressly accepted by Seller in writing, shall constitute the entire Agreement concerning the items sold, and there are no oral or other representations or agreements which pertain thereto. This Agreement shall be governed in all respects by the law of the State of Ohio. No actions arising out of the sale of the items sold hereunder or this Agreement may be brought by either party more than two (2) years after the cause of action accrues.



Parker Hannifin Corporation  
Hose Products Division  
30240 Lakeland Boulevard  
Wickliffe, OH 44092  
Phone: (440) 943-5700  
Fax: (440) 943-3129  
<http://www.parkerhose.com>

TM-SK Rev. D ECN-51666  
Bulletin 4480-T26-US 02/2014  
©Parker Hannifin Corporation Printed in U.S.A